


OBSOLETE




	DESIG	KE	DRAWN BY	DART AEROSPACE LTD VICTORIA INTERNATIONAL AIRPORT, CANADA	
1	CHECK	(E9W)/	APPROVED	DRAWING NO.	REV. A
		NIE	BW	DSI 9072	1 OF 2
I	DATE			TITLE	SCALE
	97.11.25			SPACEPOD LATCHES	NTS
	Α		97.11.25	NEW ISSUE	

DART SERVICE INSTRUCTION


AMEND INSTALLATION DRAWING D350-600 REV. B

STA: SH93-88 STC: SR00098NY STC: SR00099NY

REPLACE LATCH (H605S190A496 OR H2818-3S125A OR H605K3240) AND D2187 DOOR PROP ASSEMBLY WITH D2586 LATCH AND D2730 PROP ARM AND ILLUSTRATED COMPONENTS

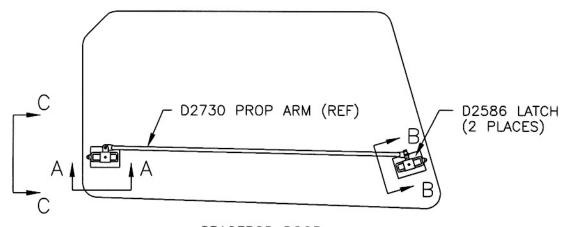

SPACEPOD DOOR
INSIDE LH SHOWN
INSIDE RH OPPOSITE

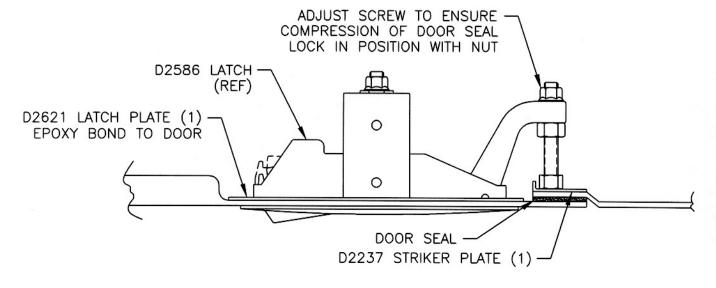


<u>SECTION A-A</u> LATCH (TYPICAL)




OBSOLETE

00.06.29 # SEE DSZ 9128 RAY.B

DESIGN	DRAWN BY	DART AEROSPACE LTD VICTORIA INTERNATIONAL AIRPORT, CANADA	
CHECKED	APPROVED	DRAWING NO.	REV. A
polox	Bus	DSI 9072	2 OF 2
DATE		TITLE	SCALE
97.11.25		SPACEPOD LATCHES	NTS

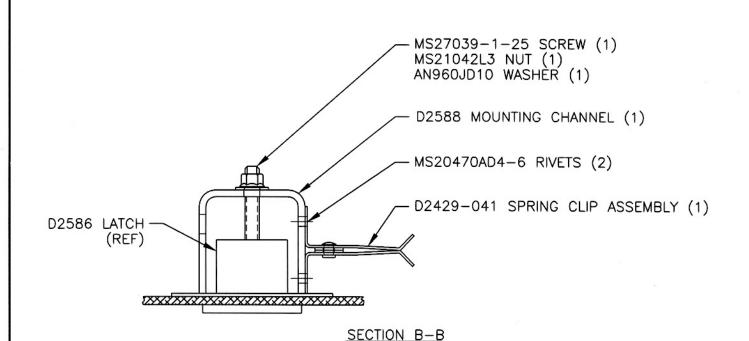

FWD LATCH

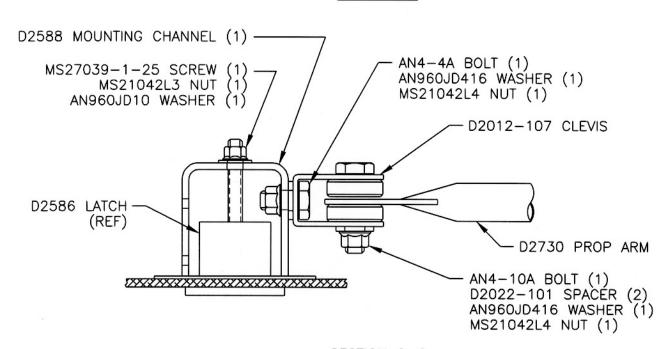

SECTION C-C AFT LATCH